



СКАНДИ




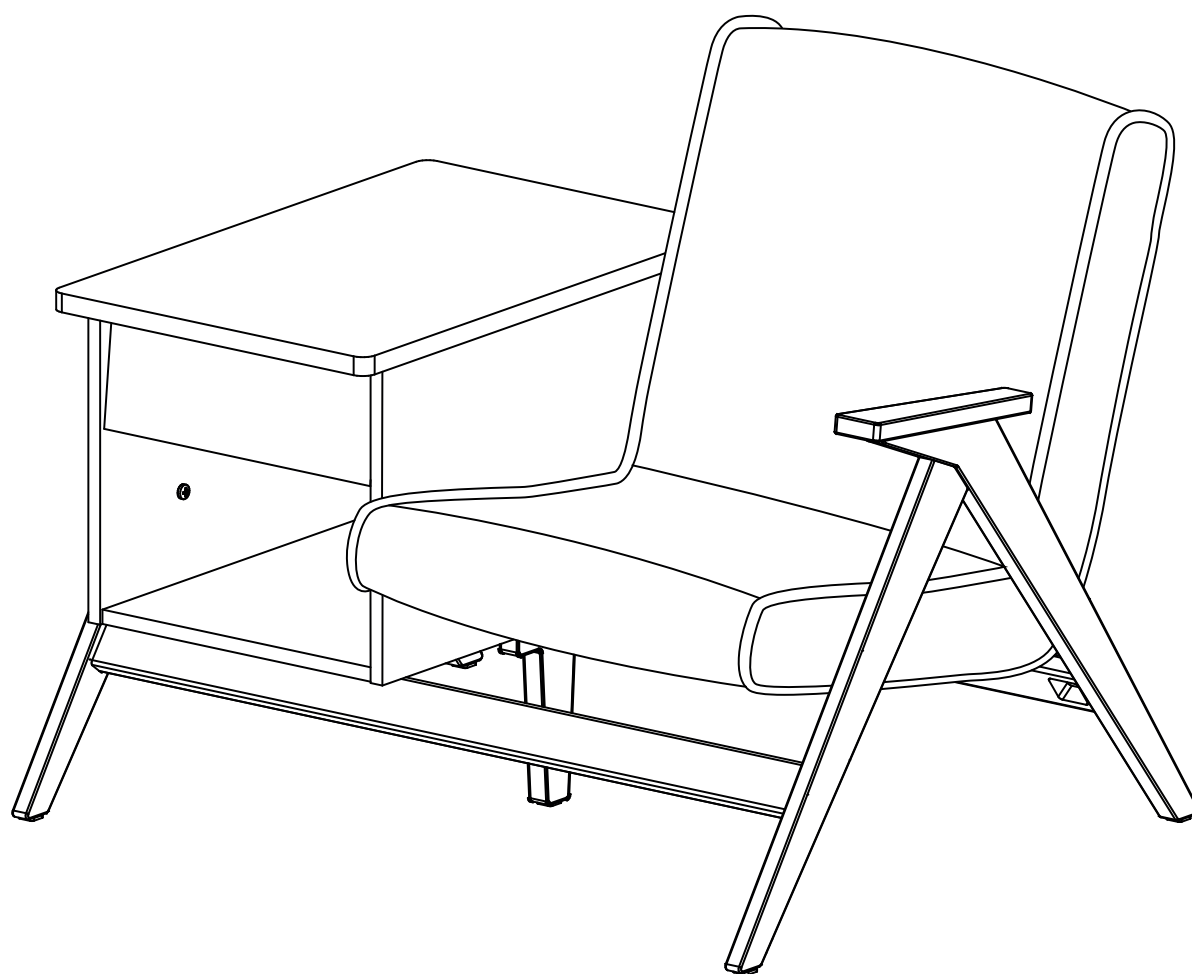


!ПРЕДУПРЕЖДЕНИЕ!




ПРОИЗВОДИТЕЛЬ РЕКОМЕНДУЕТ
ПРИ СБОРКЕ МЕБЕЛИ
ПОЛЬЗОВАТЬСЯ УСЛУГОЙ
КВАЛИФИЦИРОВАННОГО СБОРЩИКА С
ПРОФЕССИОНАЛЬНЫМ ИНСТРУМЕНТОМ

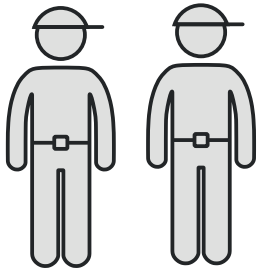


30-45 min

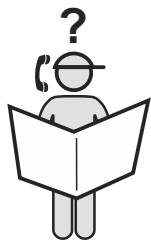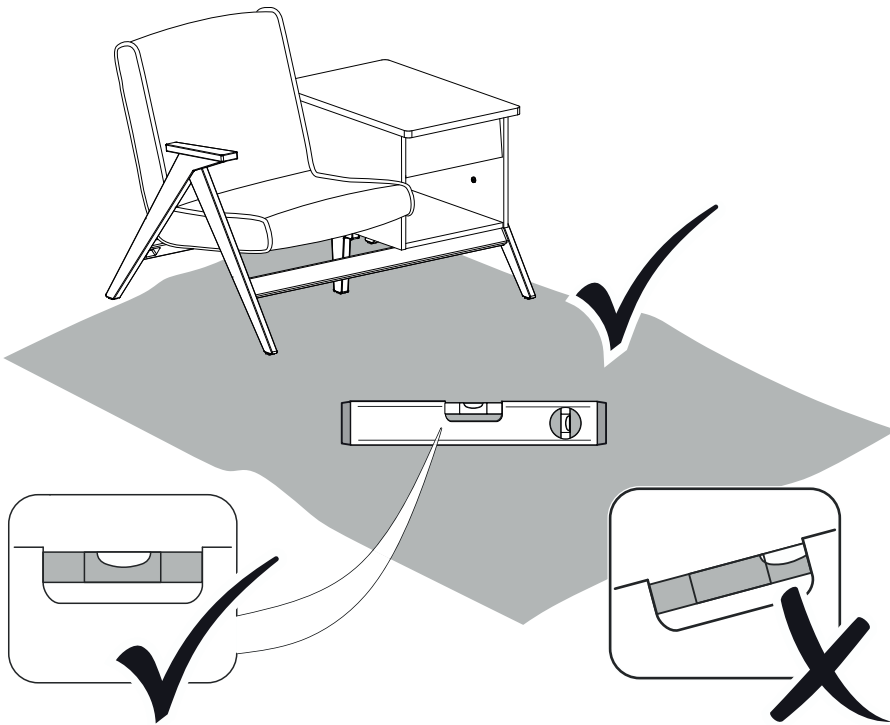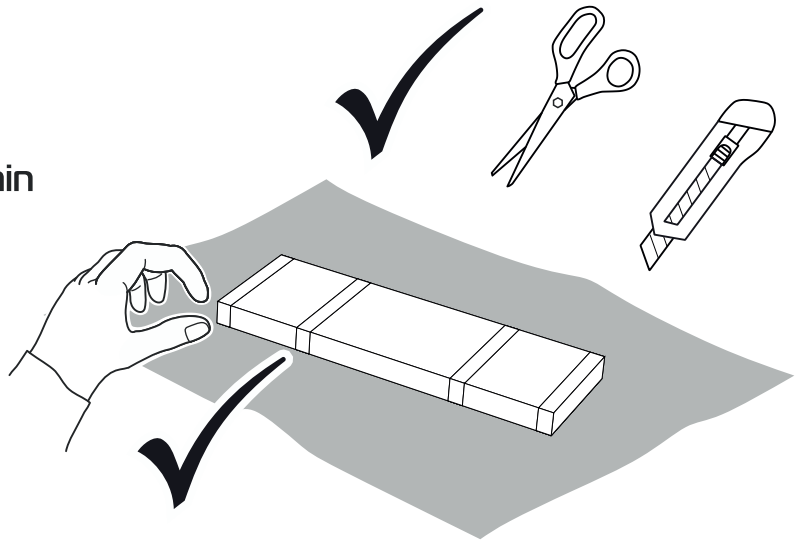


PZ2

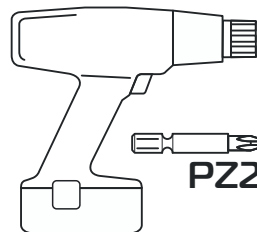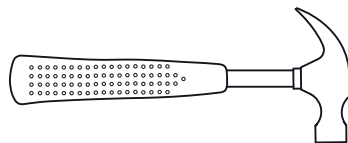














PZ2

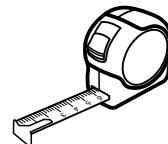


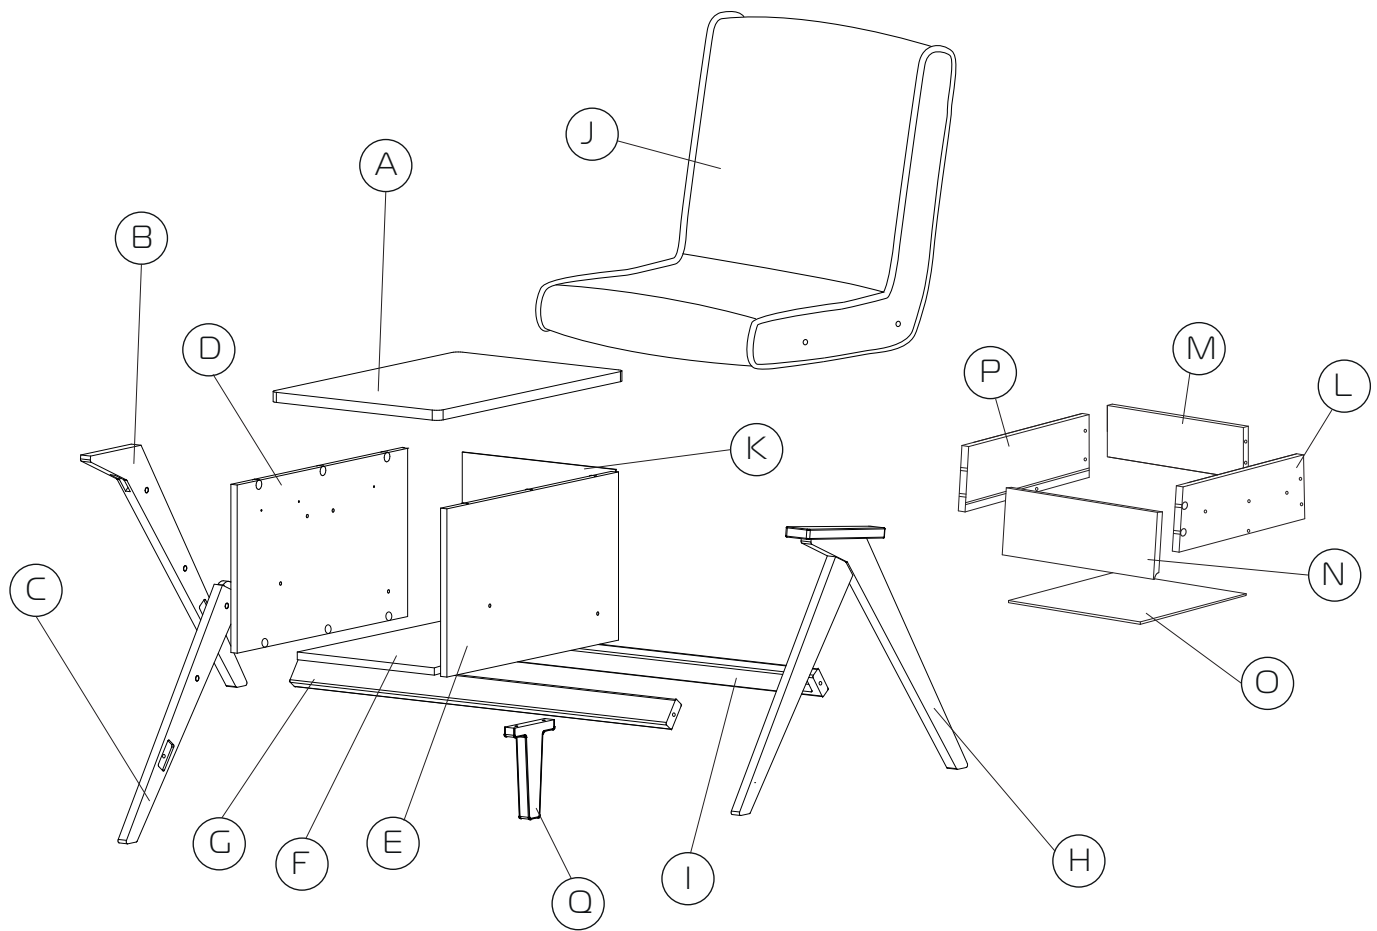





- | | | | | | |
|----------------|----|------------------|----|---------------|----|
| (A) 428x652x23 | x1 | (E) 350x600x16 | x1 | (I) 956x60x25 | x1 |
| (B) 763x149x23 | x1 | (F) 367x592x16 | x1 | (J) x1 | |
| (C) 622x76x21 | x1 | (G) 956x60x25 | x1 | (K) 354x389x3 | x1 |
| (D) 350x600x16 | x1 | (H) x1 | | (L) 381x90x16 | x1 |
| (M) 310x70x16 | x1 | (P) 381x90x16 | x1 | | |
| (N) 362x128x17 | x1 | (Q) 196,8x140x25 | x1 | | |
| (O) 324x385x3 | x1 | | | | |

1:1

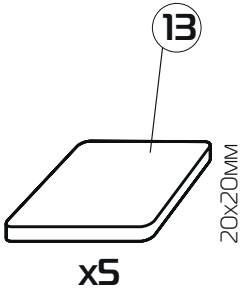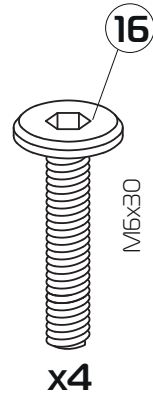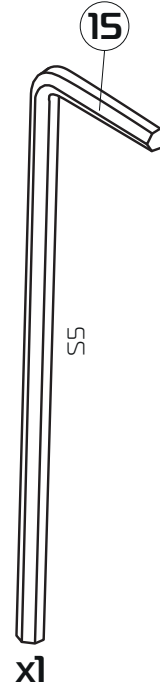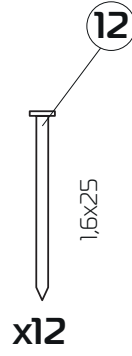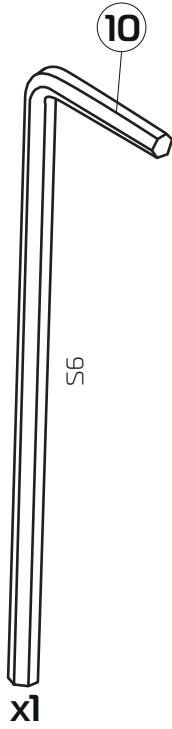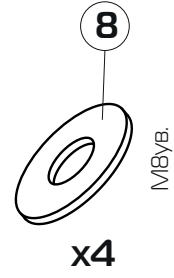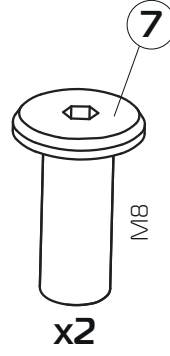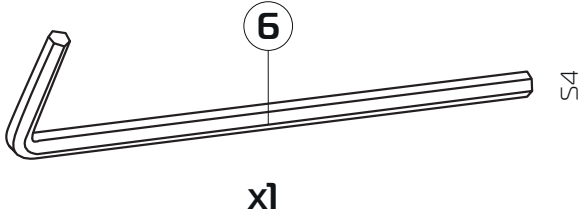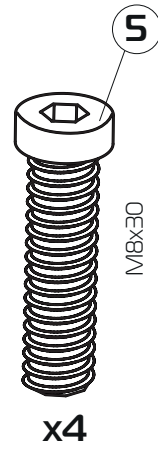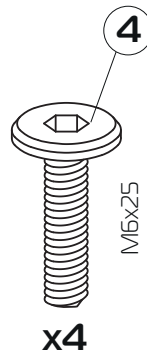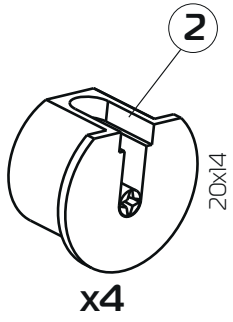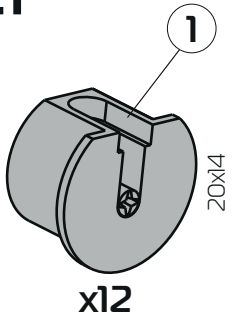


1:4

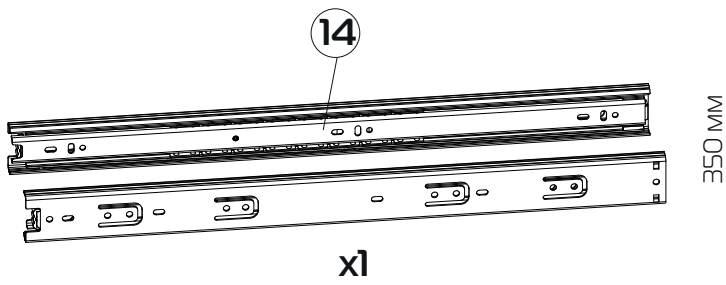


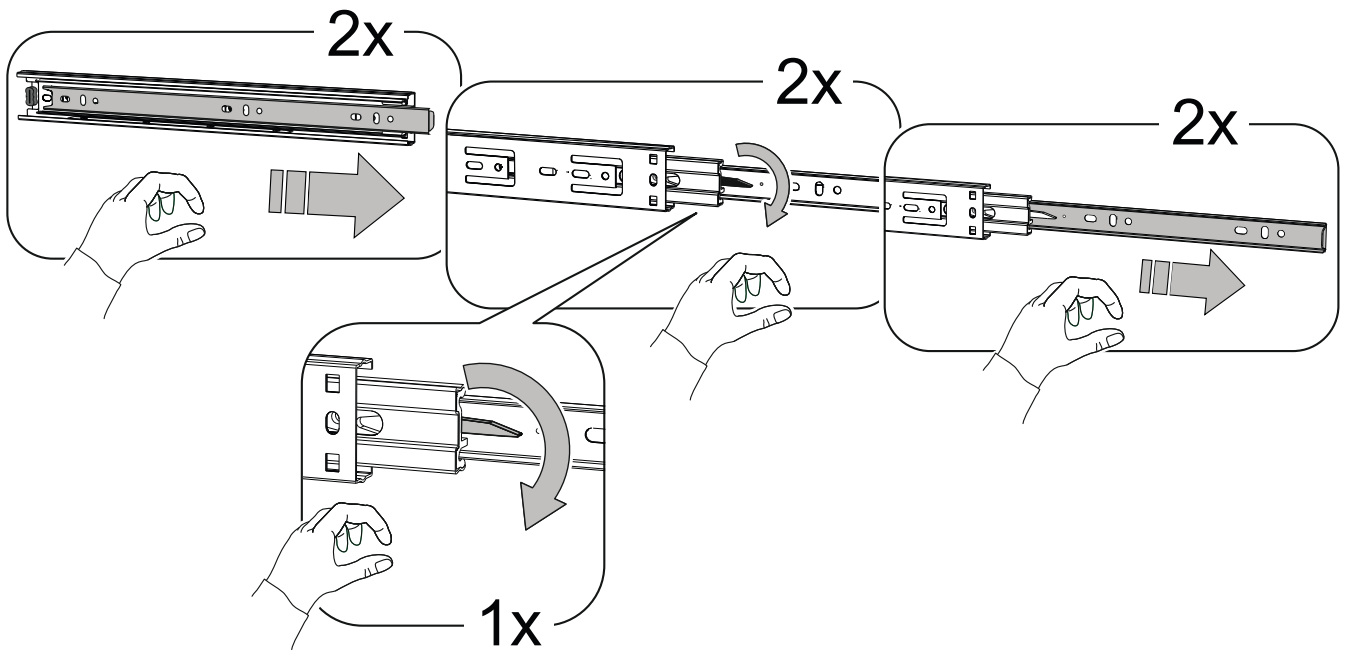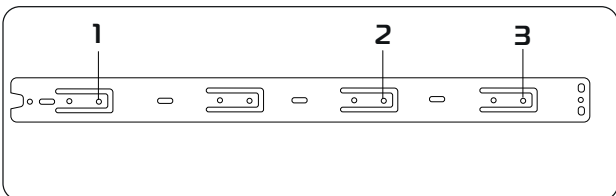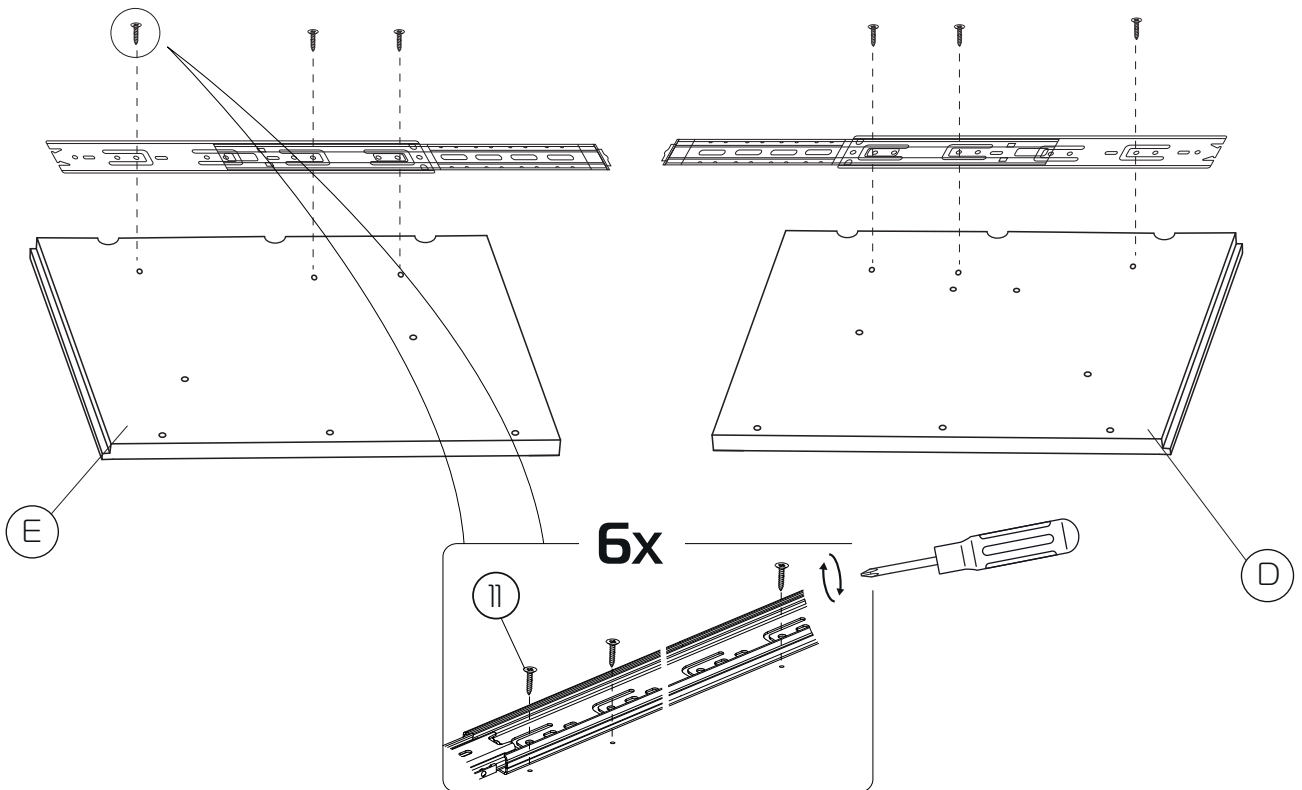1**2**

3

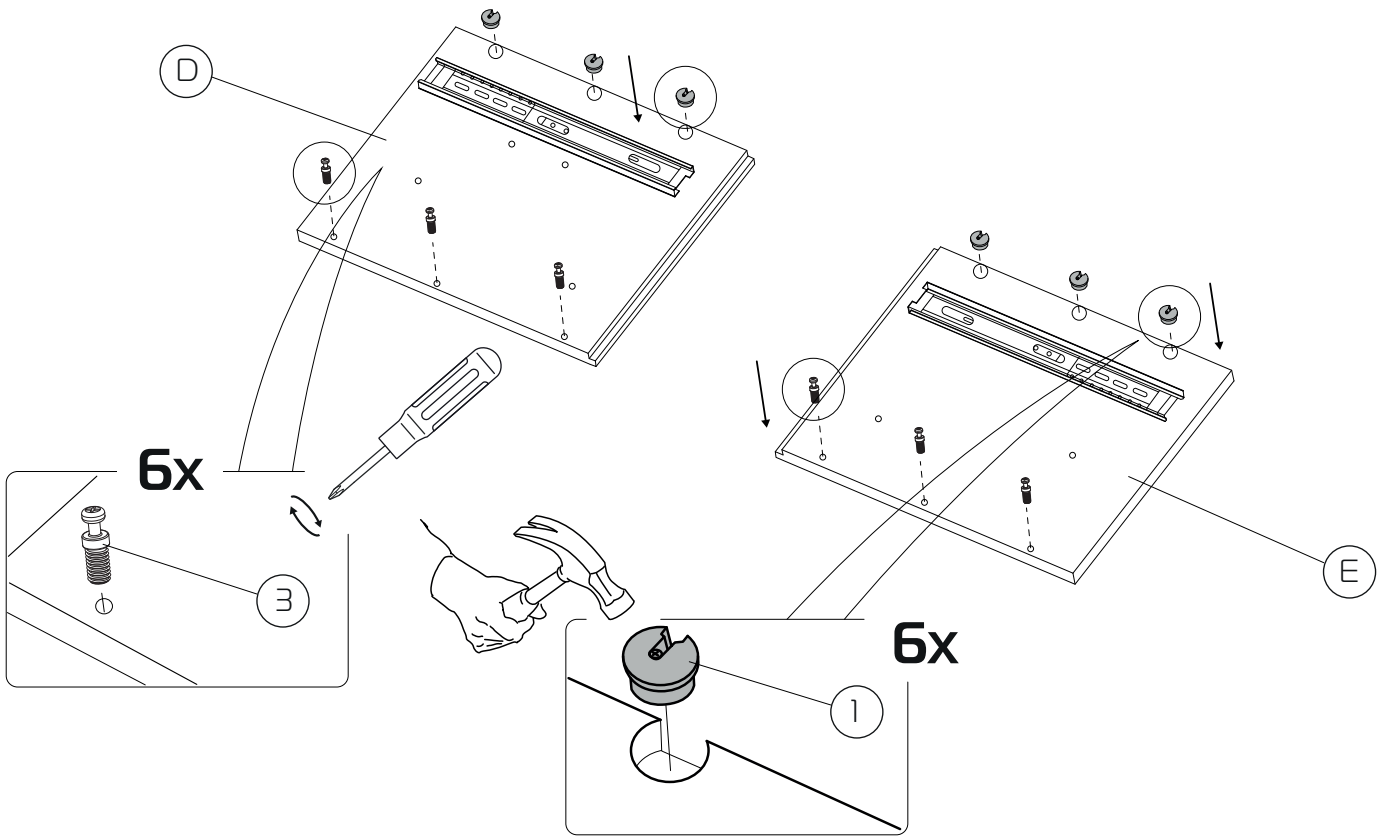


4

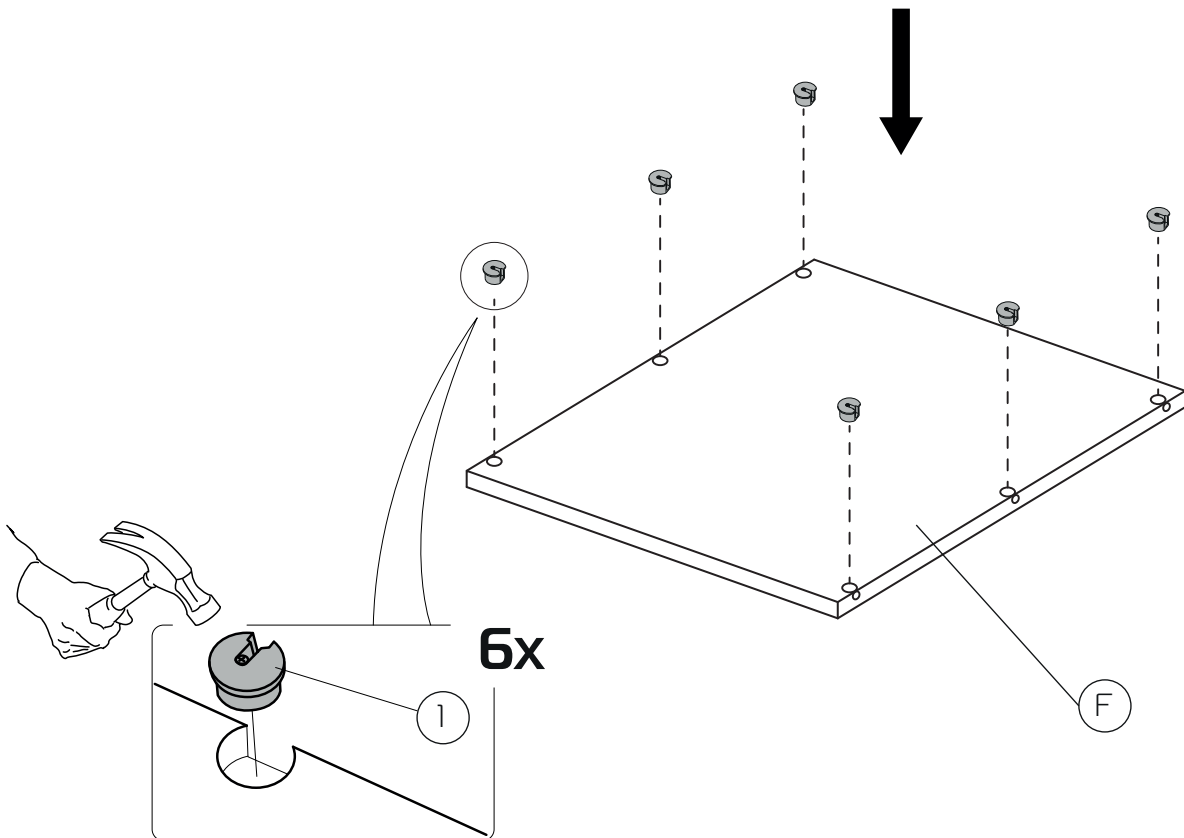


6


5

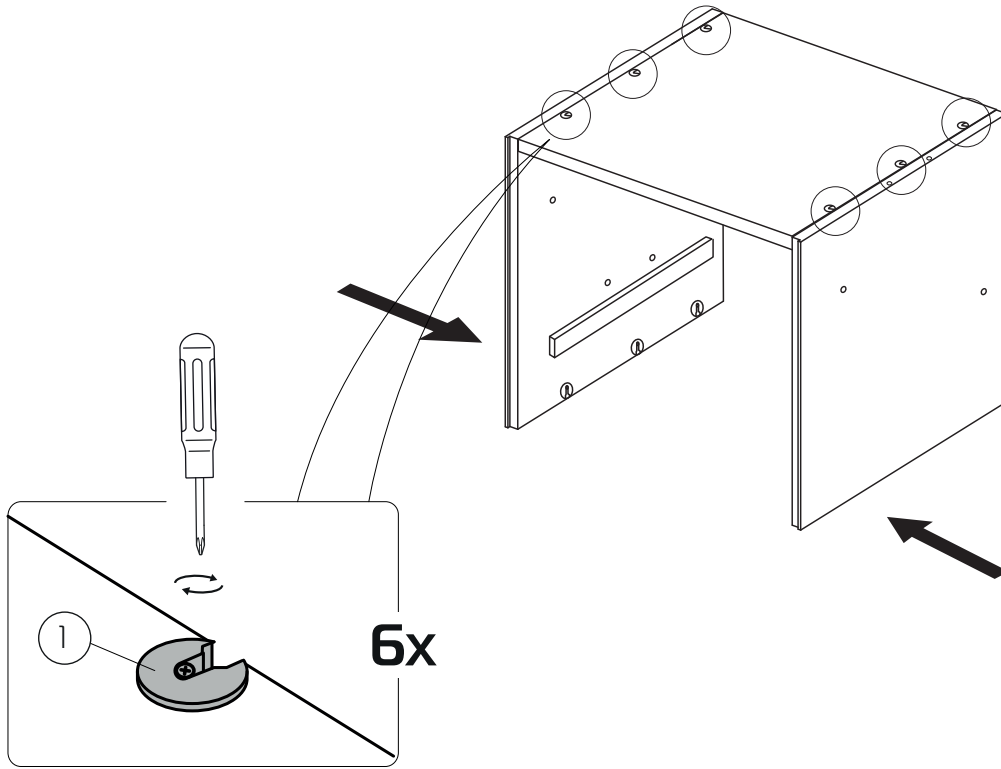


6

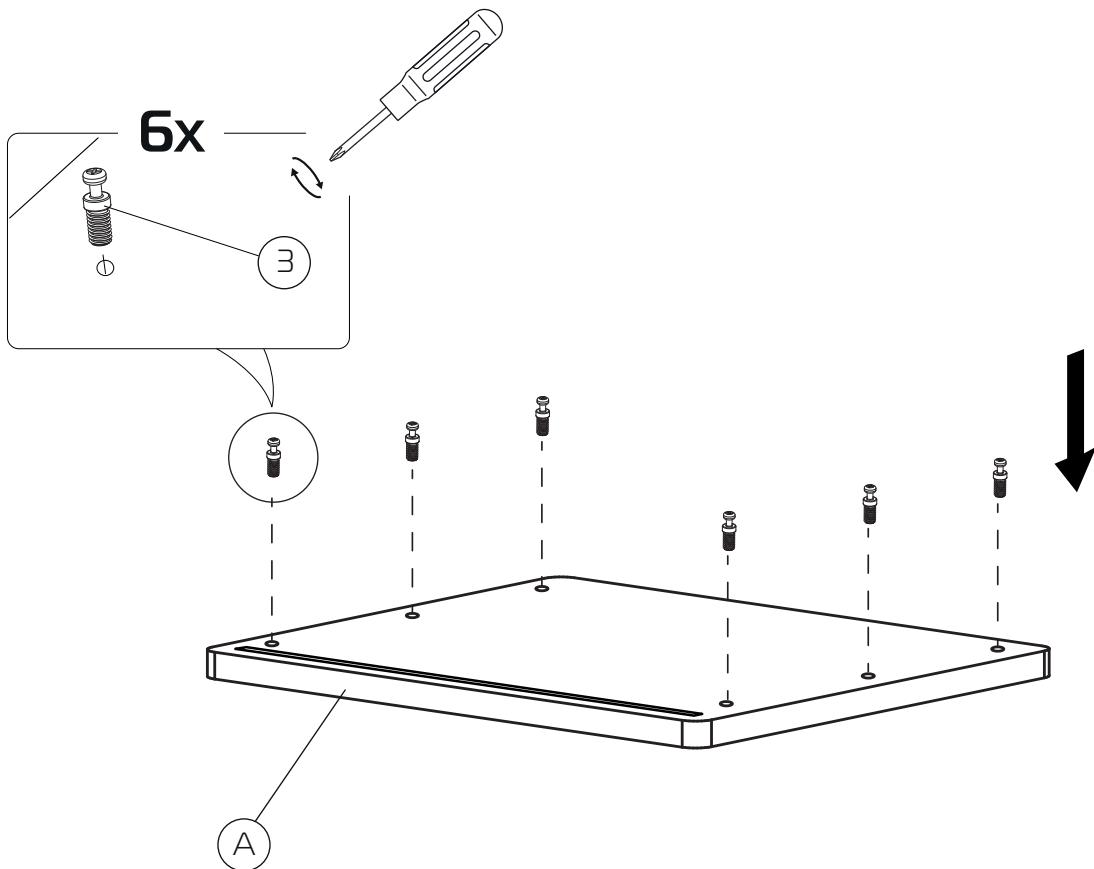


7

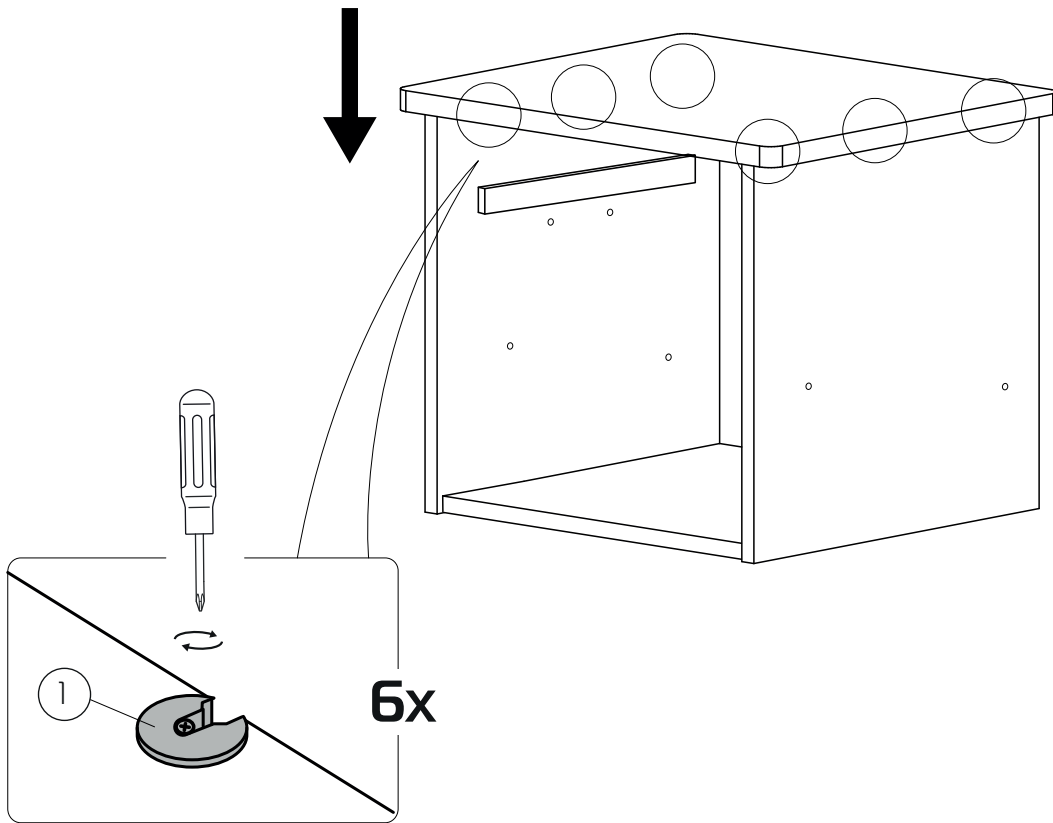


8

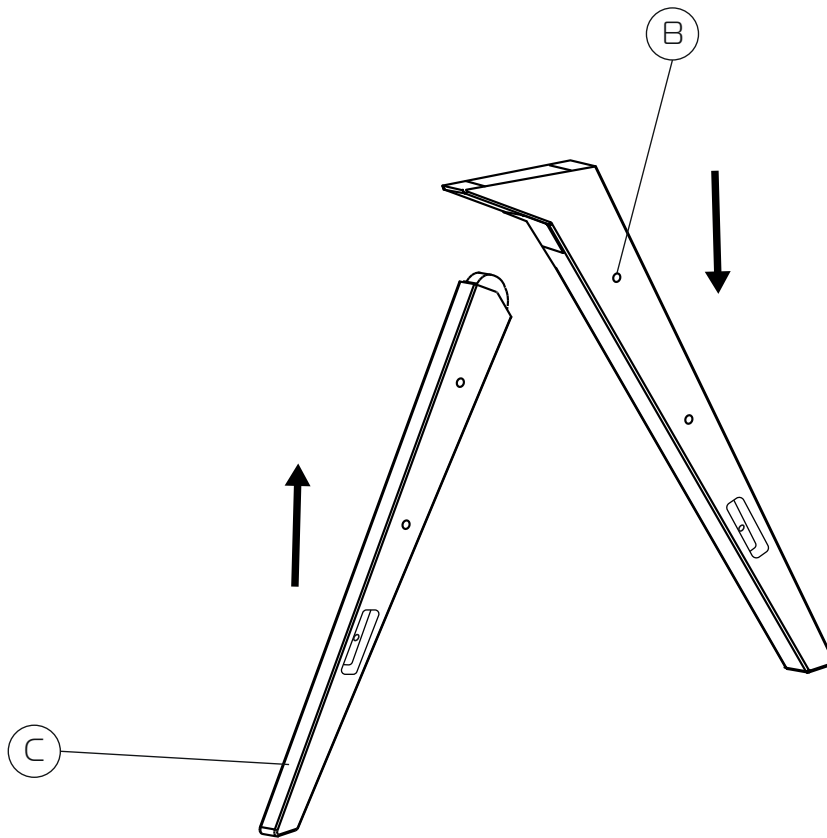


9

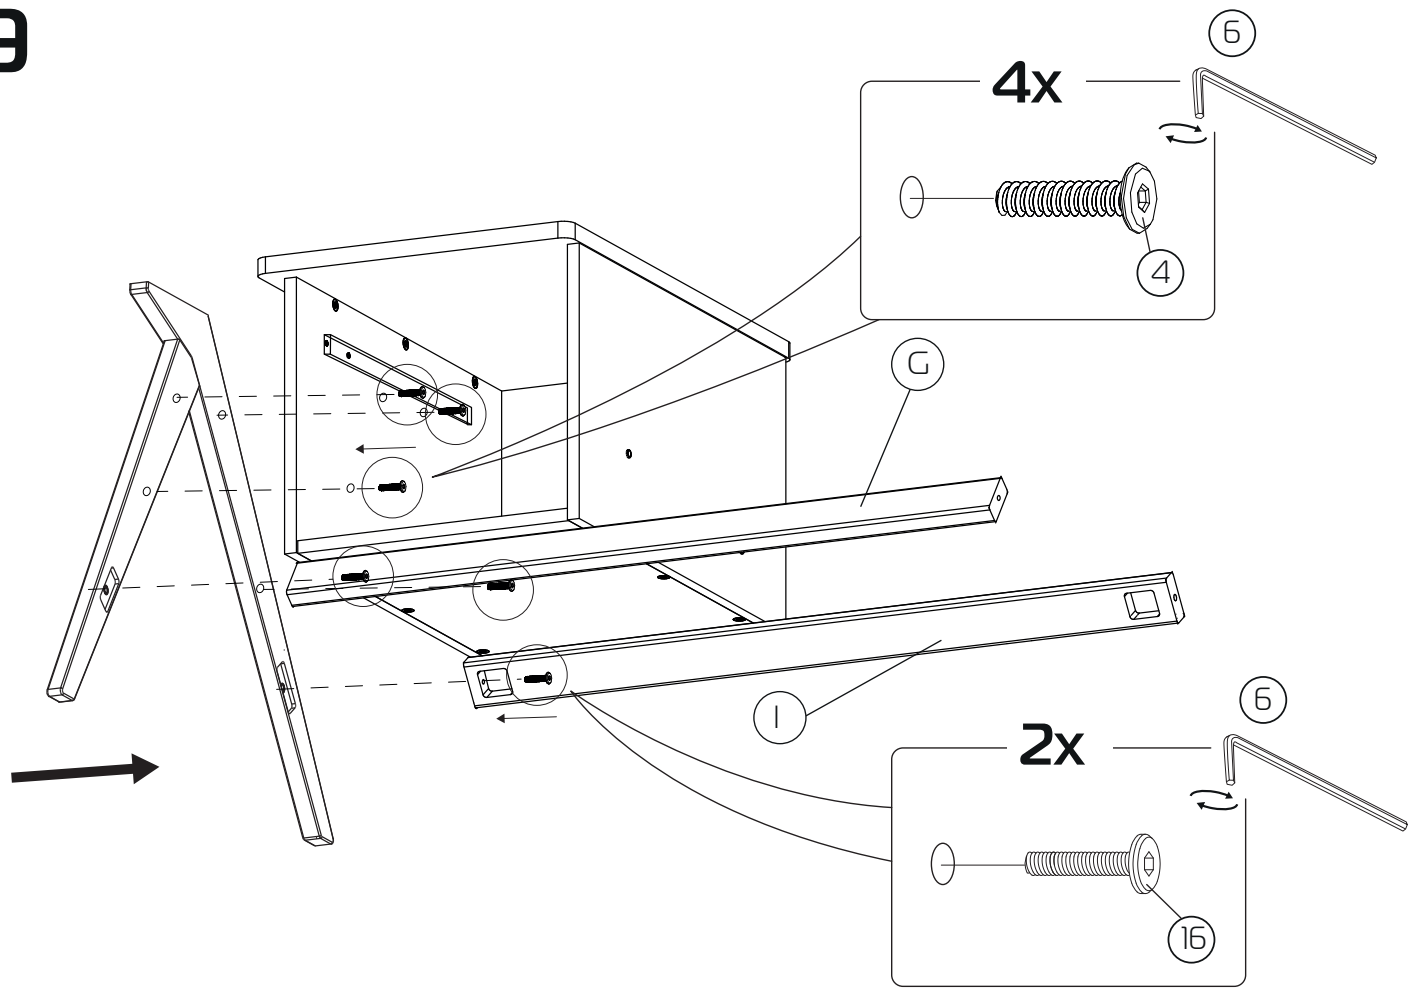


10

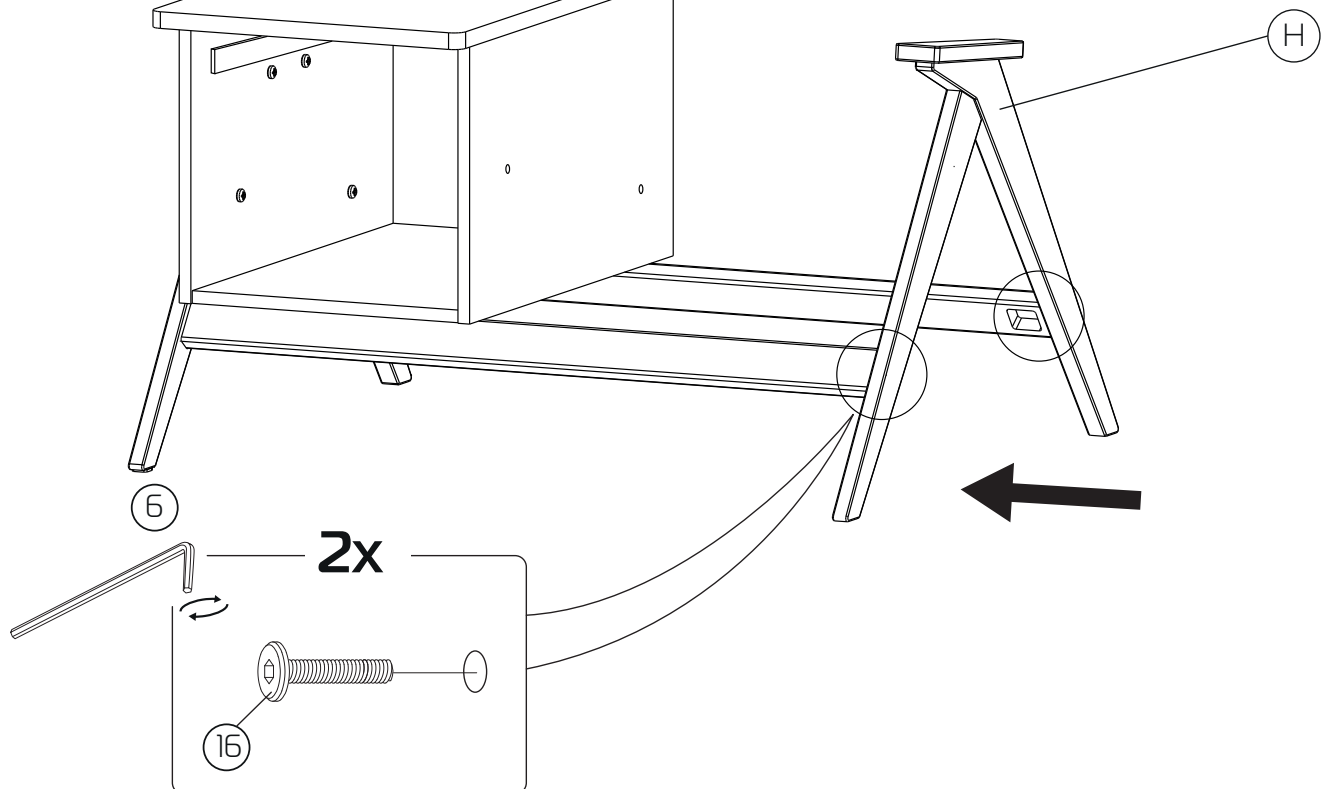


11

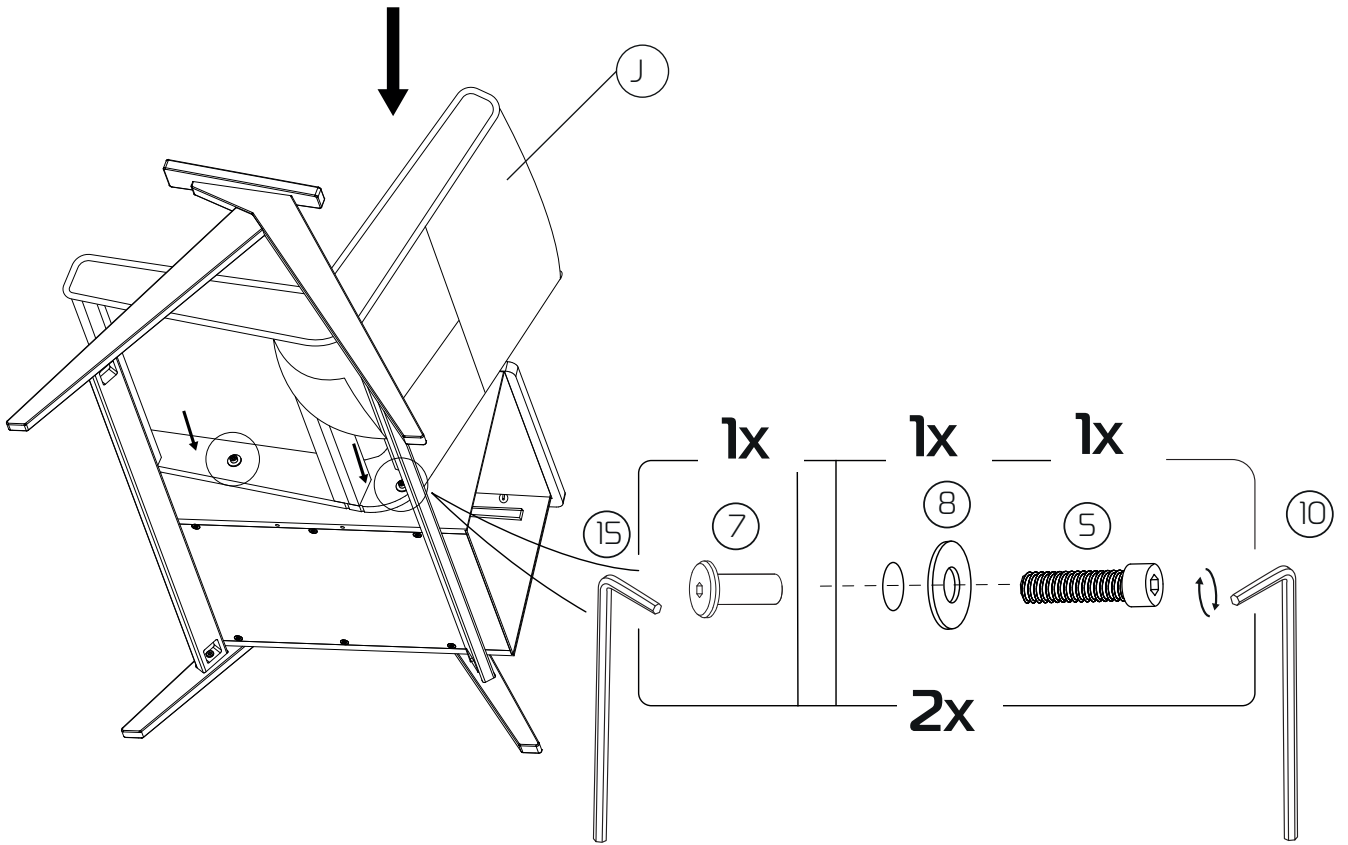


12

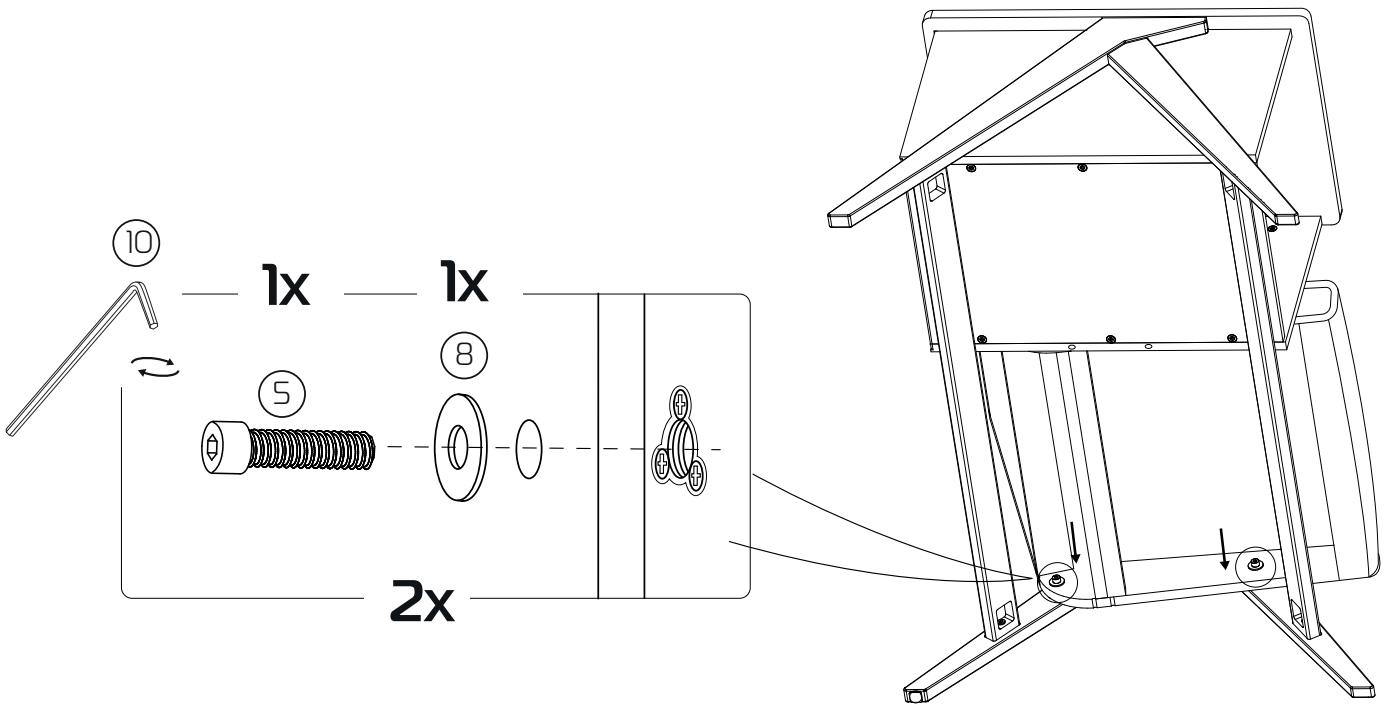




13

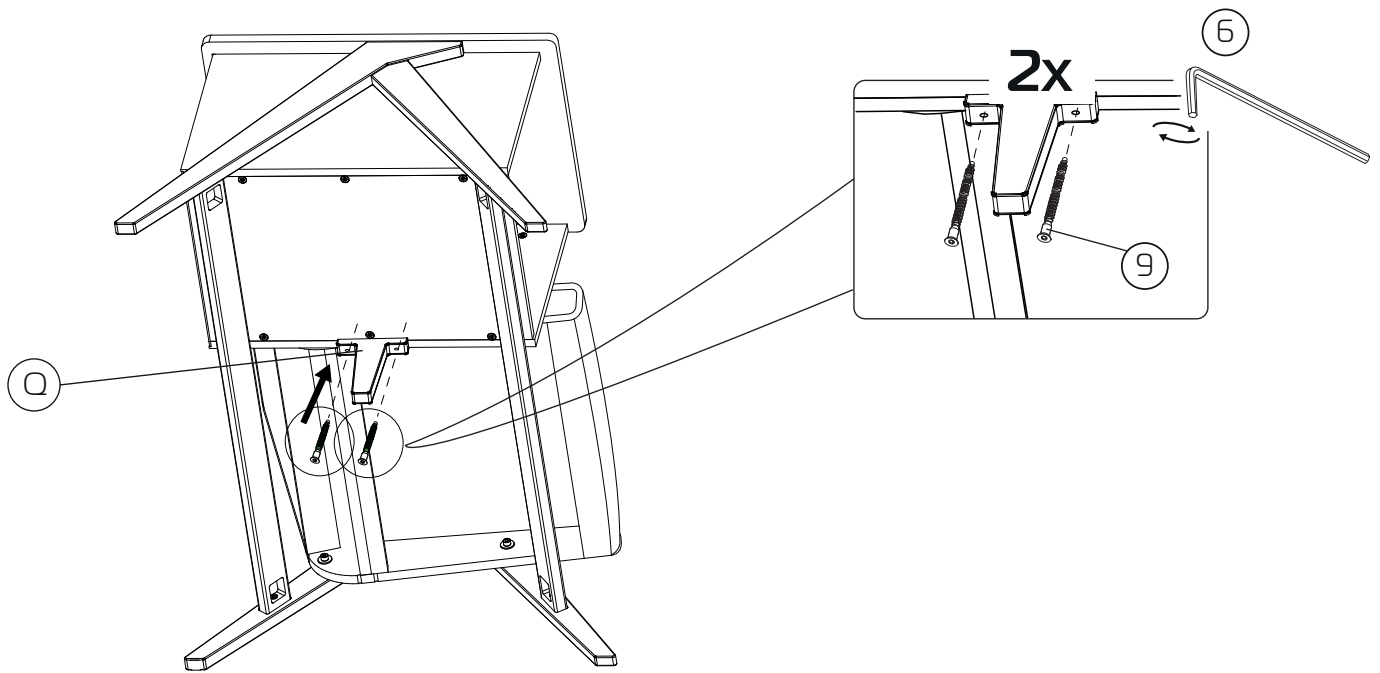


14

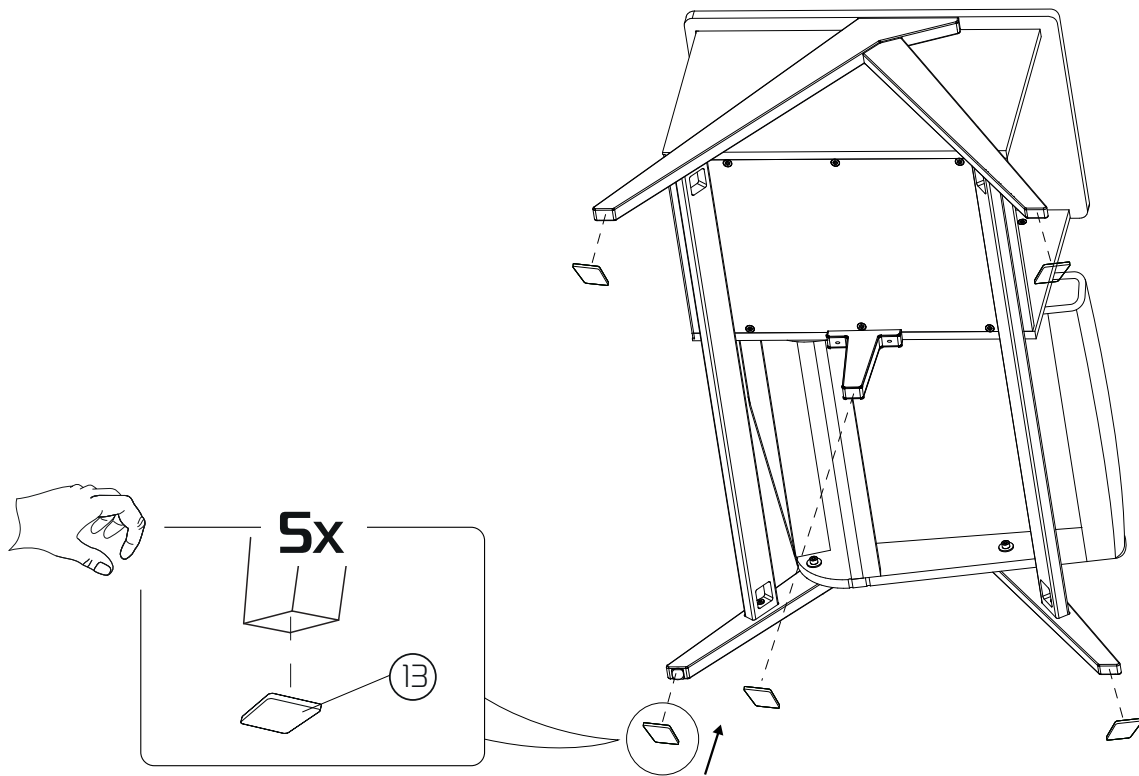


15

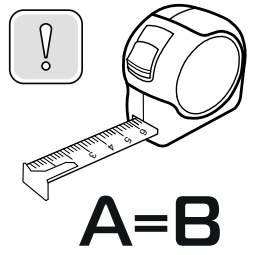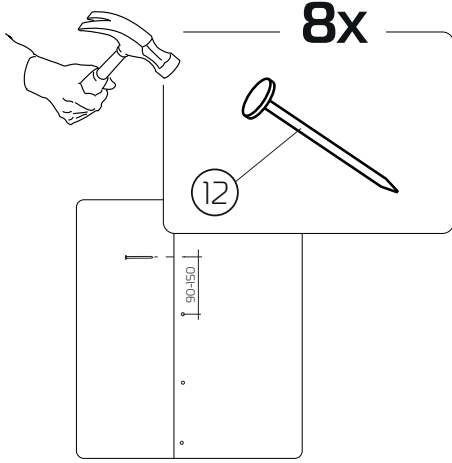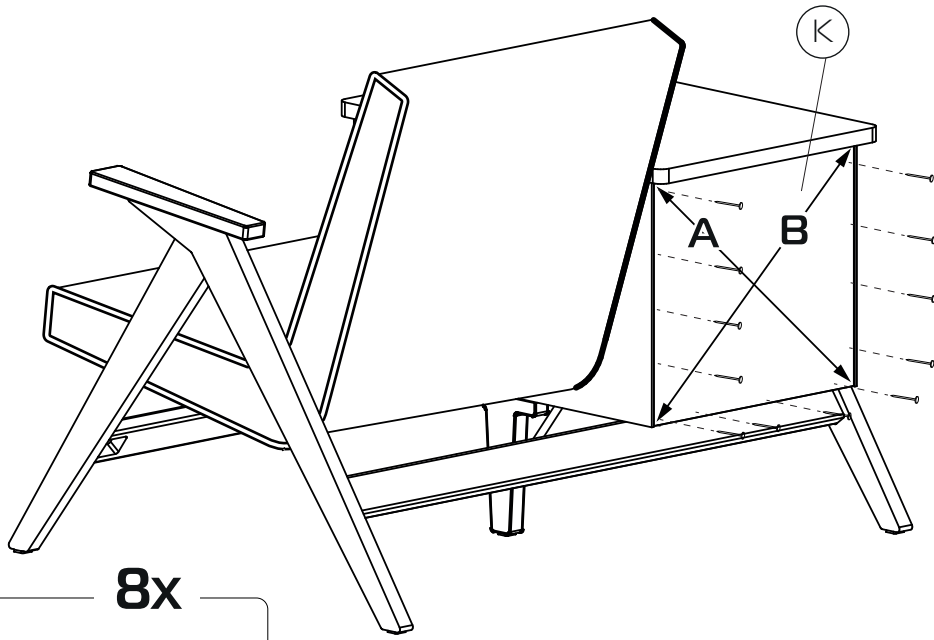


16

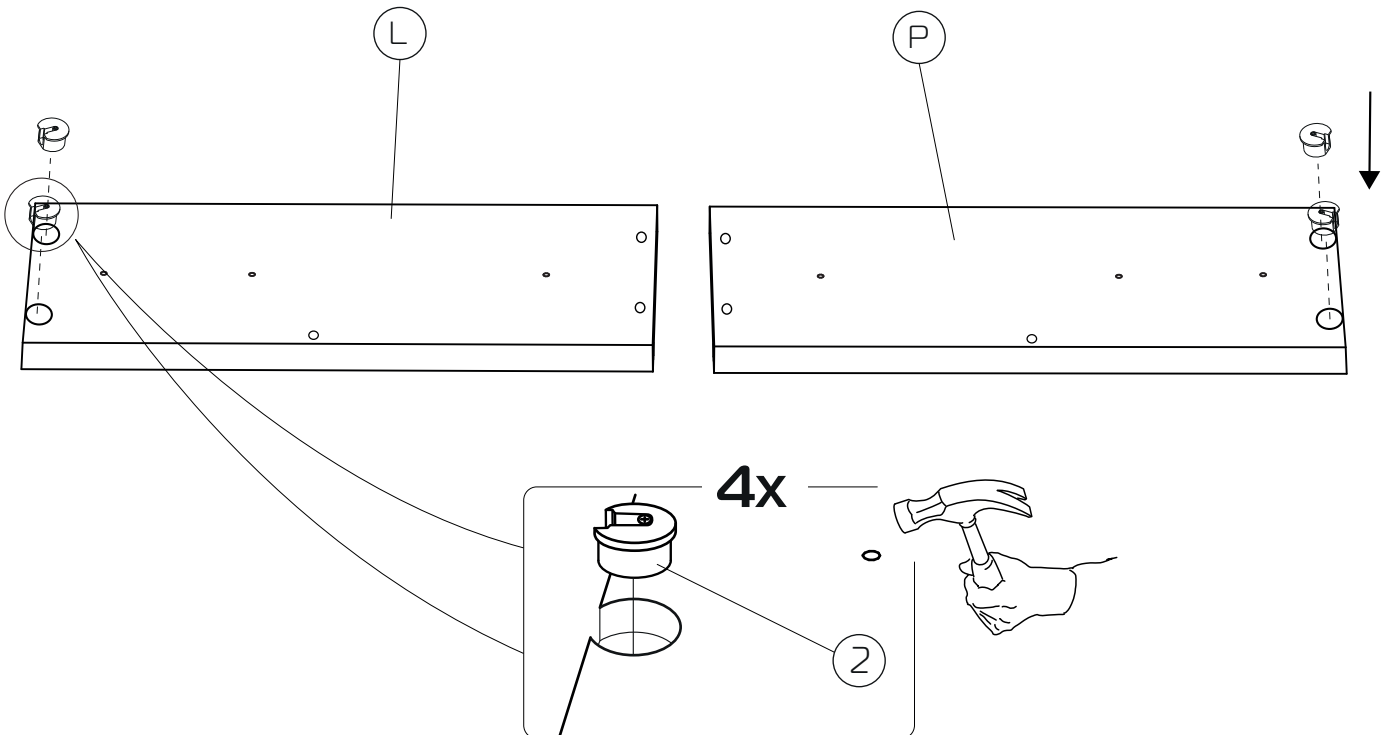


17

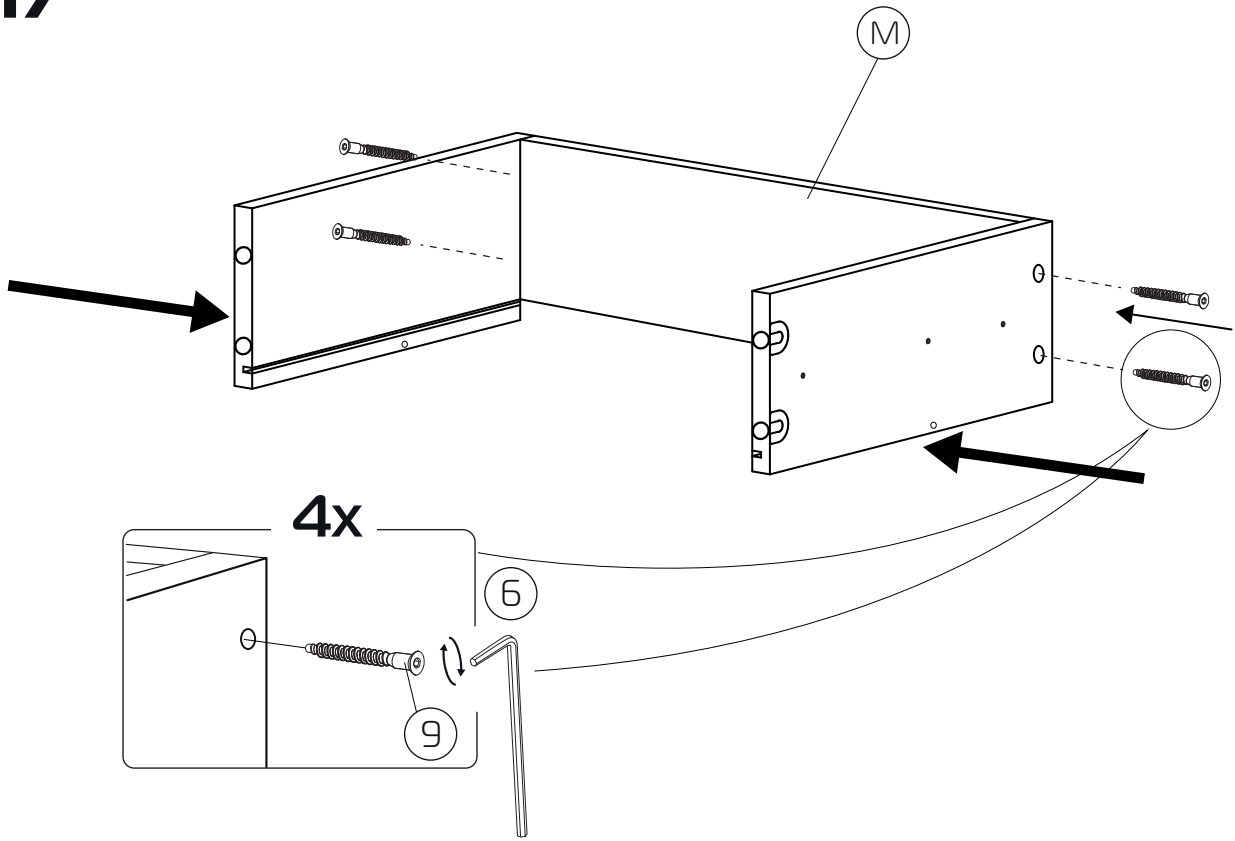


18

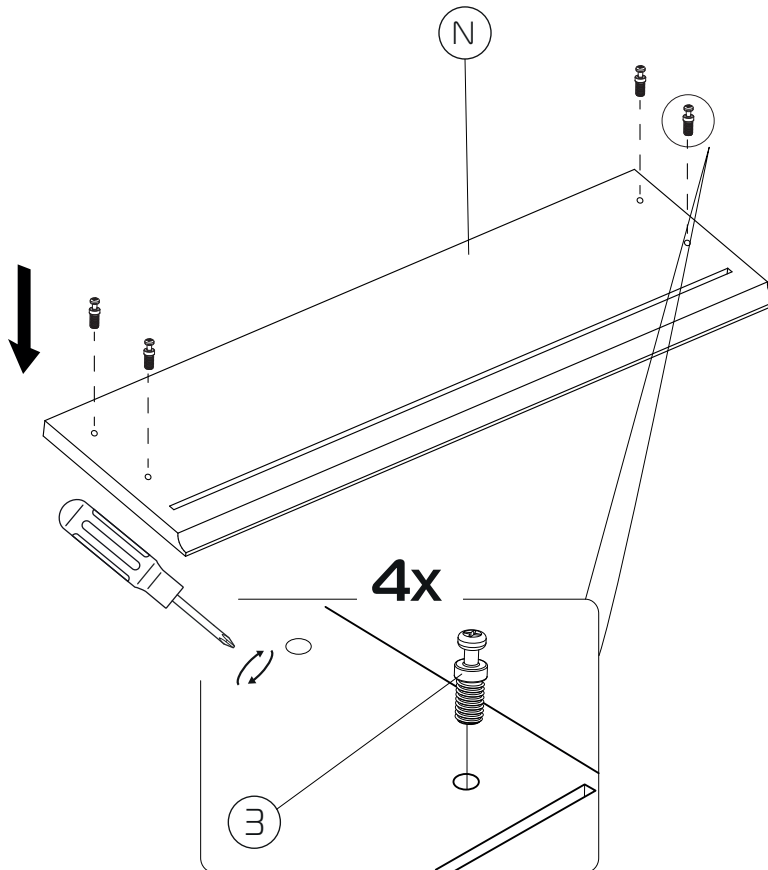



19

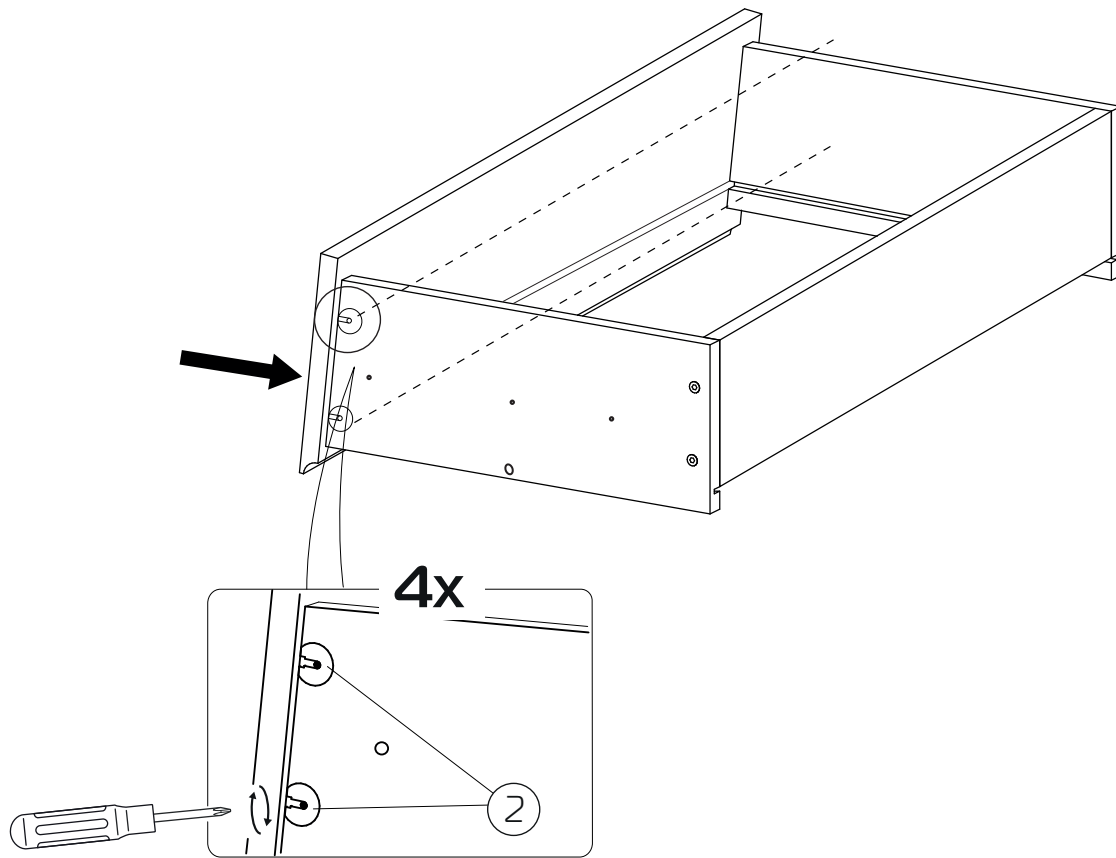

20

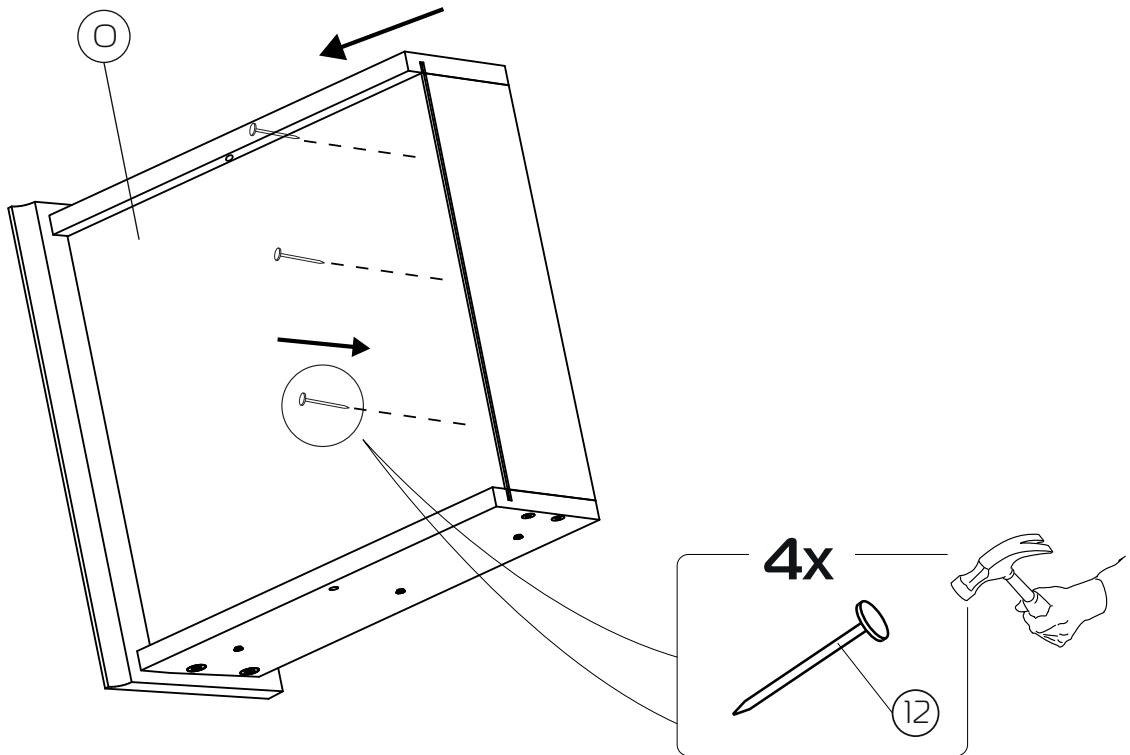

21

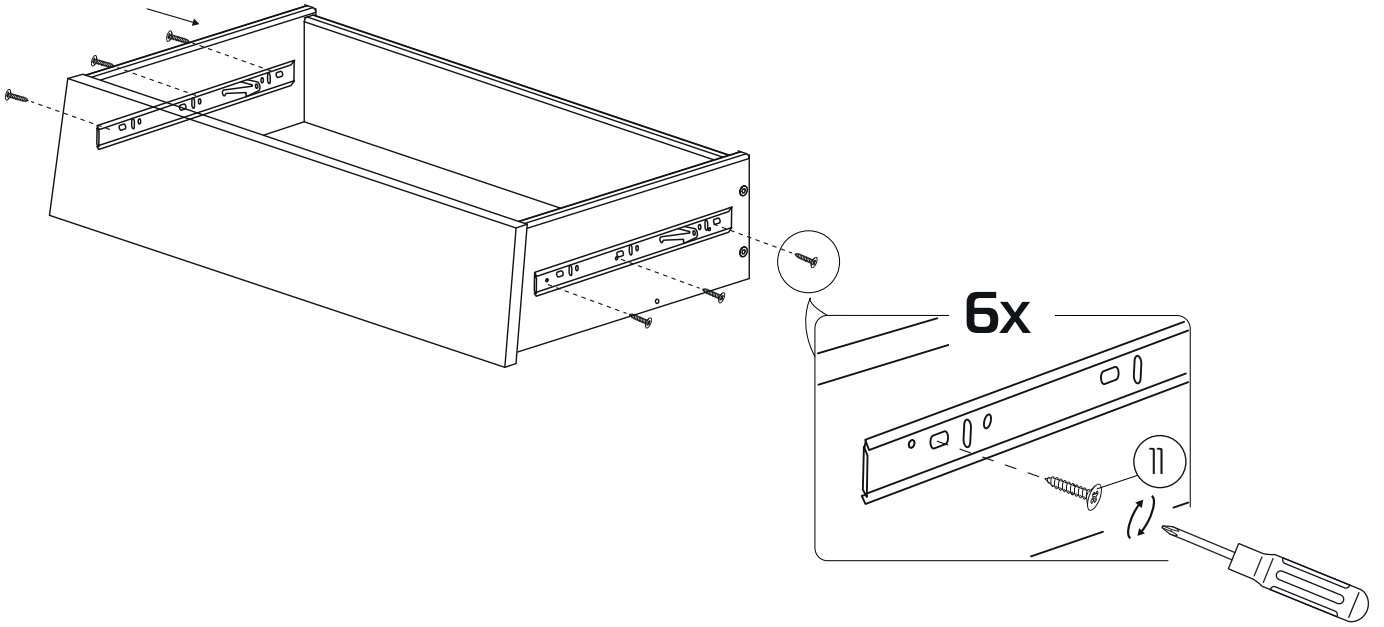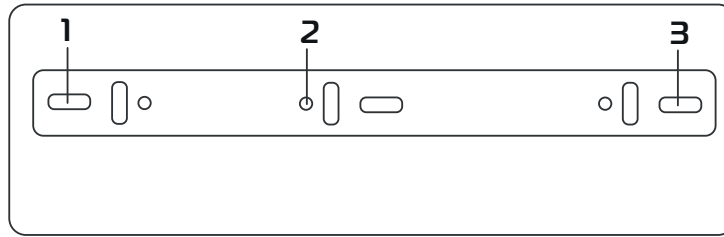

22

